

Skiver Controls

Index of Adjustments

Front View



Angle Adjustment for Feed Roller

Top = Tension
Bottom = Angle

Protective Cover

Covers Bell
Knife
(Removable)

Sharpening Wheel

Moves the Pink
Sharpening Stone
Towards the Edge
of the Bell Knife

Bell Knife Adjustment

Moves Bell Knife Closer
to the Feed Wheel to
adjust for thickness of
leather and wear on the
blade

Engages Motor (optional)

Some Models
have a Motor
that is always
running, this
knob engages
the clutch that
operates the
machine

End View

Presser Foot Pressure Adjustment Knob

Presser Foot Lifting Lever


Presser Foot Angle Adjustment Knob

Controls Angle of Skive

Presser Foot Adjustable Angle

Knob for Adjusting Movable Arm

Controls Width of Skive

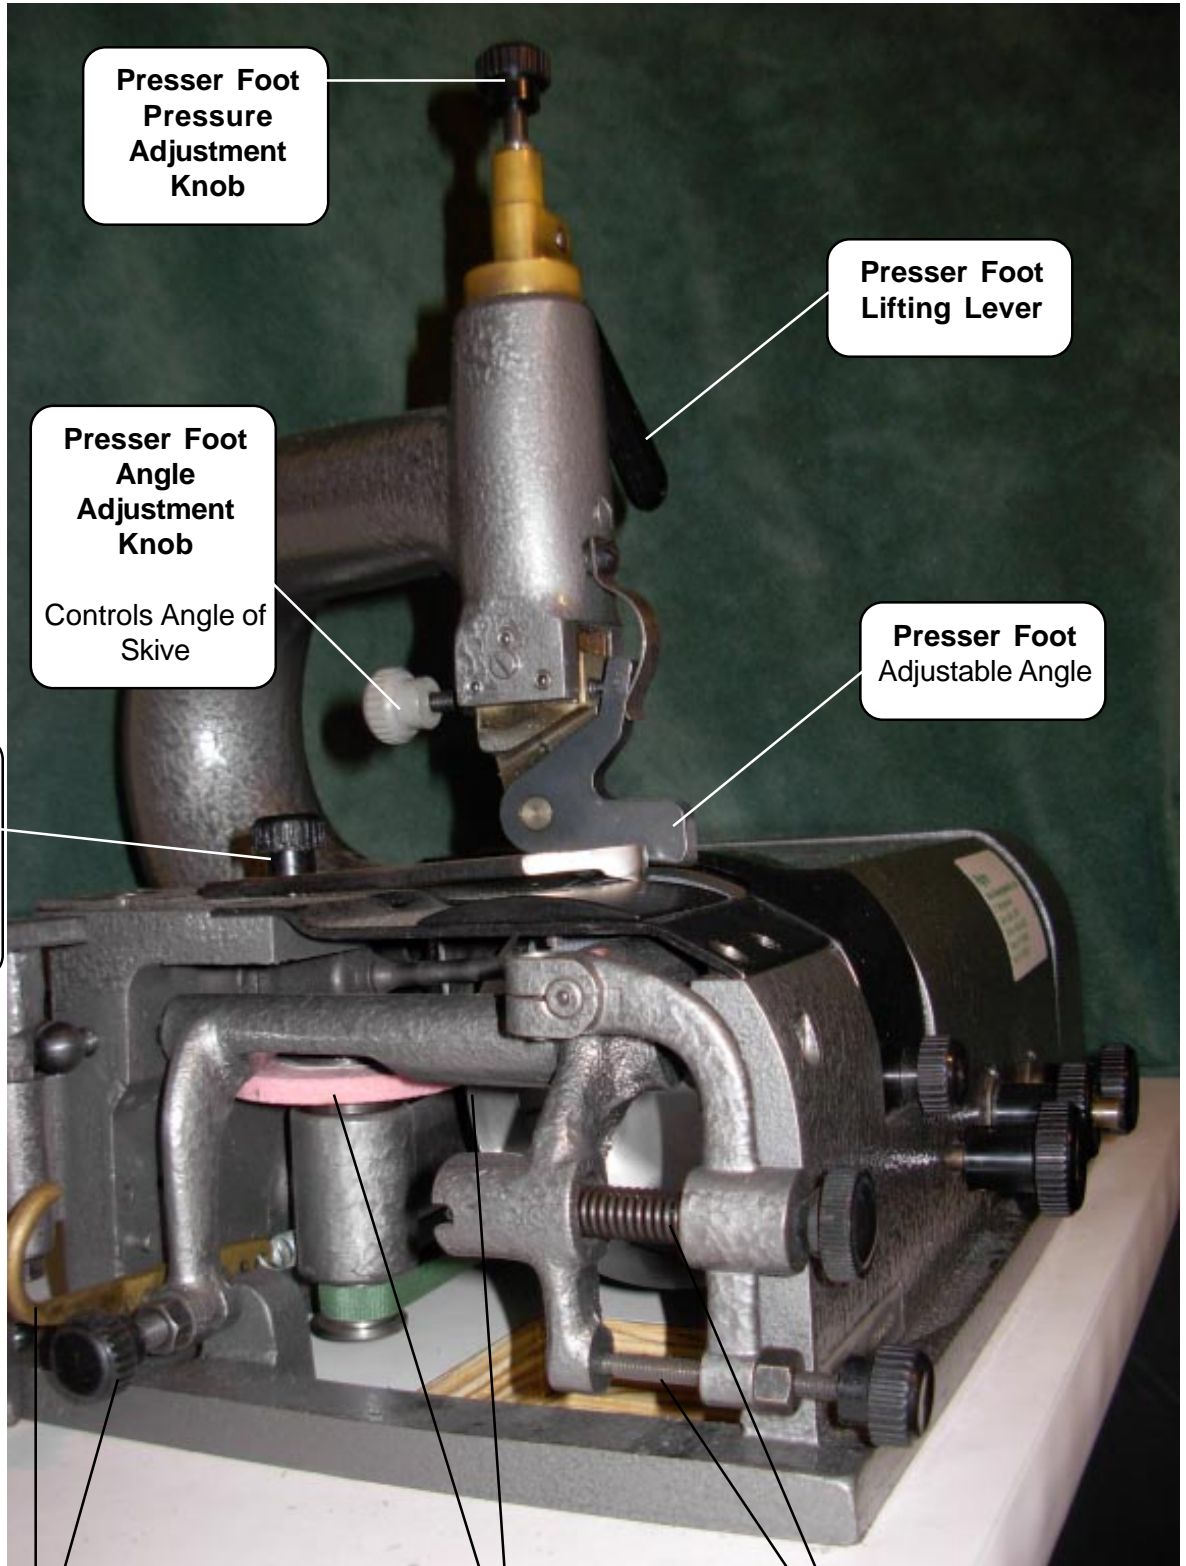

Angle and Tension Adjustment for Feed Roller

Brass Lever = Spring Tension
Bottom Knob = Angle of Feed Roller

Sharpening Stone Touches Edge of Bell Knife

Angle Adjustment for Feed Roller

Top = Tension
Bottom = Angle

Close Up View of Cutting Area and Controls

Angle Adjustment Knob for Presser Foot

Presser Foot



Adjustable Arm Controls
Width of Skive


Stone Feed Wheel

Bell Knife Cutting Edge

Adjust distance from Feed Wheel
According to Thickness of Leather

Thin Leather = Closer
Thick Leather = Further

End View of Sharpening Wheel and Bell Knife

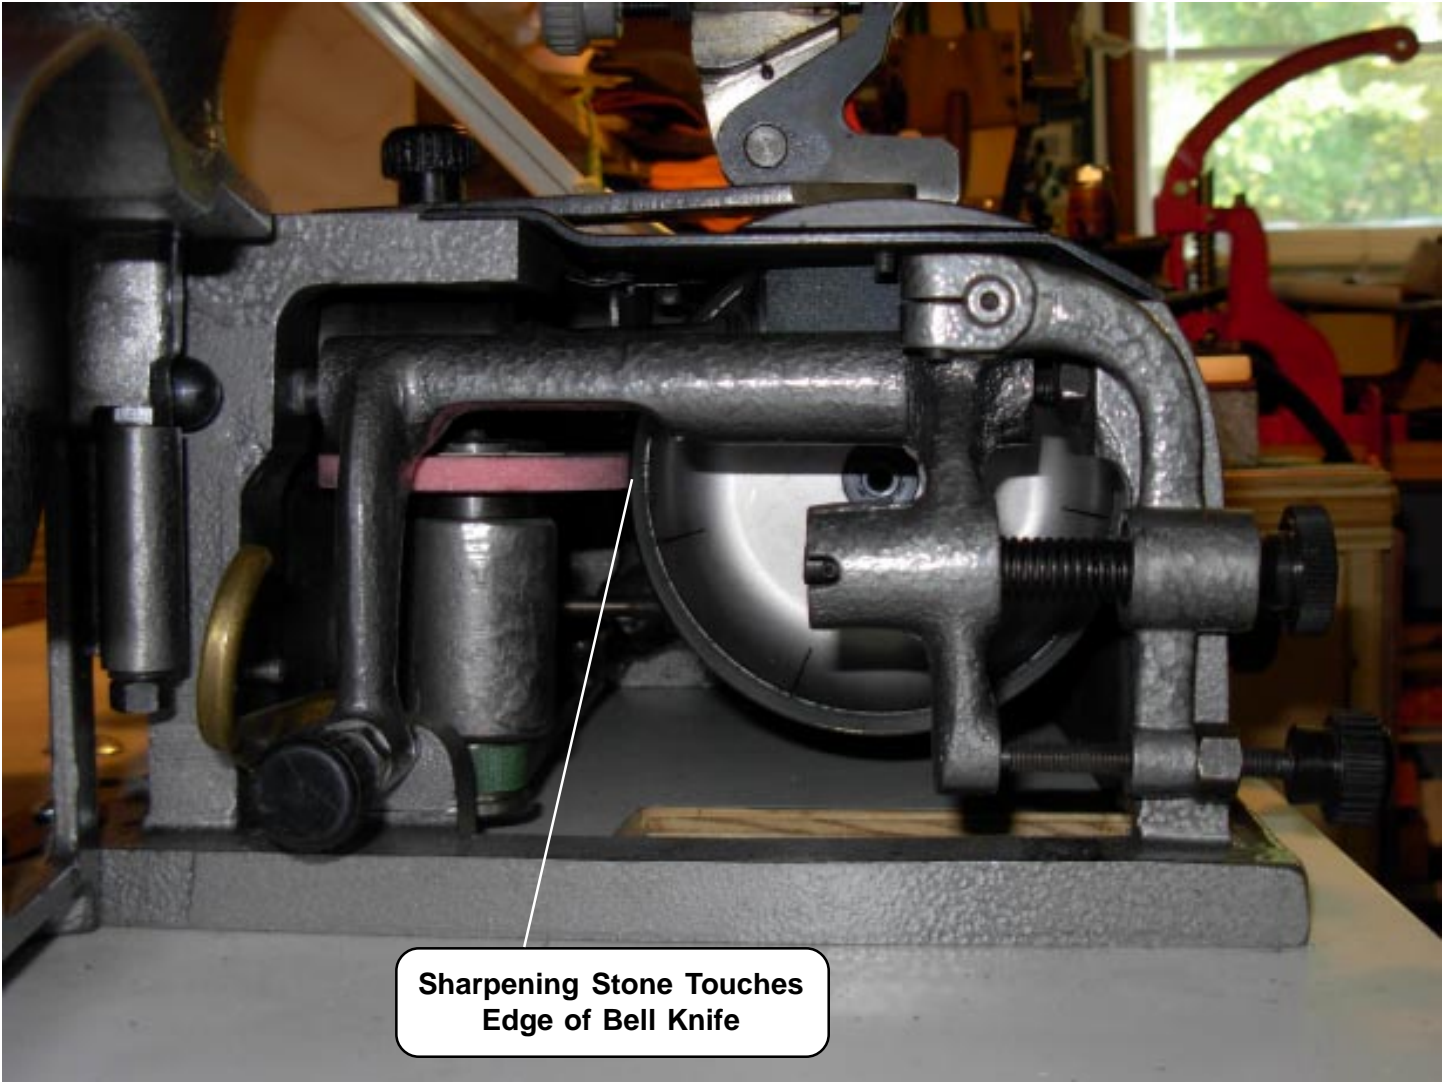

Tools for Sharpening Maintaining Bell Knife and Sharpening Stone



Sharpening Stone Dressing Wheel

When the sharpening stone wheel becomes grooved or uneven, this tool is used to make the wheel round and smooth.

Hold the small steel wheels on the end of the tool next to the grinding stone and activate the motor to turn the grinding wheel.

Ceramic Honing Stone

This tool is used to finish the inside of the Bell Knife after using the Stone Grinding Wheel to sharpen the cutting edge.

The tool is placed on the inside of the Bell Knife as the motor is turning, this removes the "Burr" on the inside of the bell knife.